



# Motorola V710 Logic Board Replacement

Written By: Karl Sanders



## INTRODUCTION


This repair guide shows how to replace the logic board.

---

### TOOLS:



- [Fingers](#) (1)
  - [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery

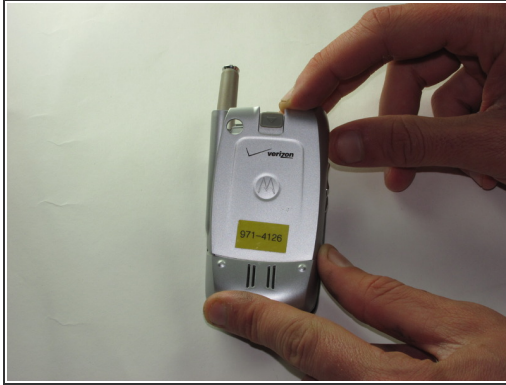

- Press down on the back button while pulling away from the body of the phone to release the back cover.

## Step 2

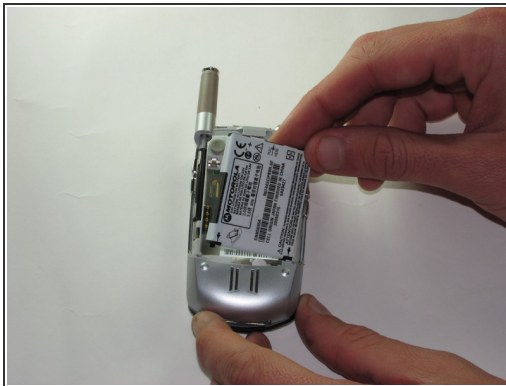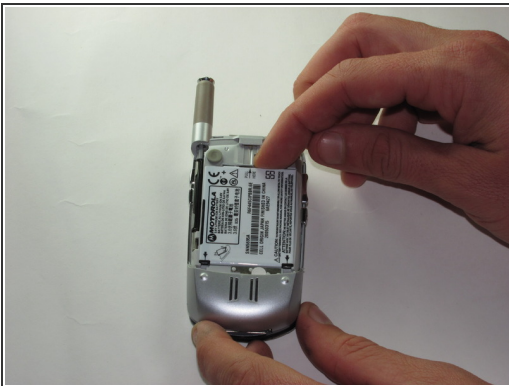

- Remove the battery from the phone by gently pulling upward on the battery with your fingers.



## Step 3 — Logic Board





- Unscrew and remove the antenna by gripping the base and twisting clockwise.
- Once the antenna has passed the threading, pull out.

## Step 4





- Remove the screws from the upper side of the phone with the T6 Torx screwdriver.
- The first screw is underneath where the antenna was and the other is visible to the right.

## Step 5

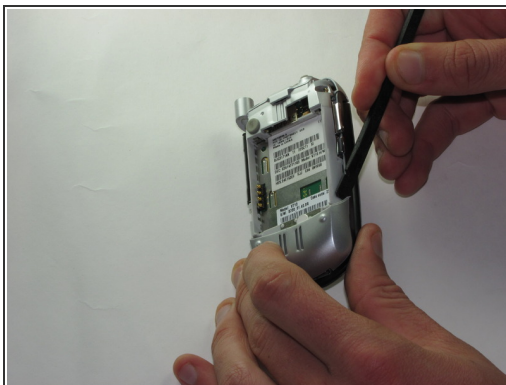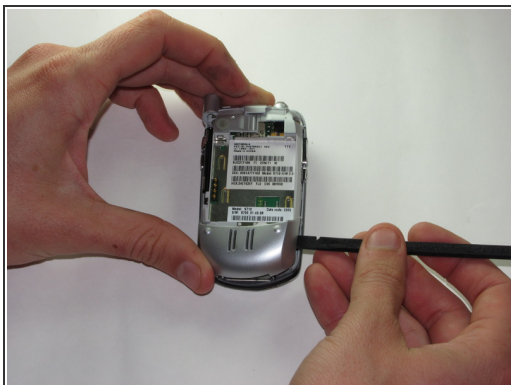

- Insert the spudger under the left corner of the bottom plate.
  - Using a twist and pry motion separate the bottom plate and work your way to the right.
- i** This can be somewhat difficult and require a good deal of work.

## Step 6

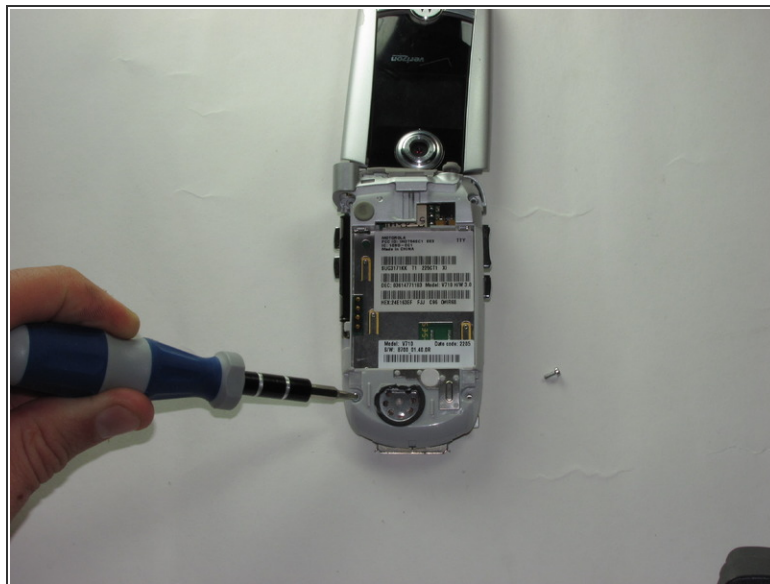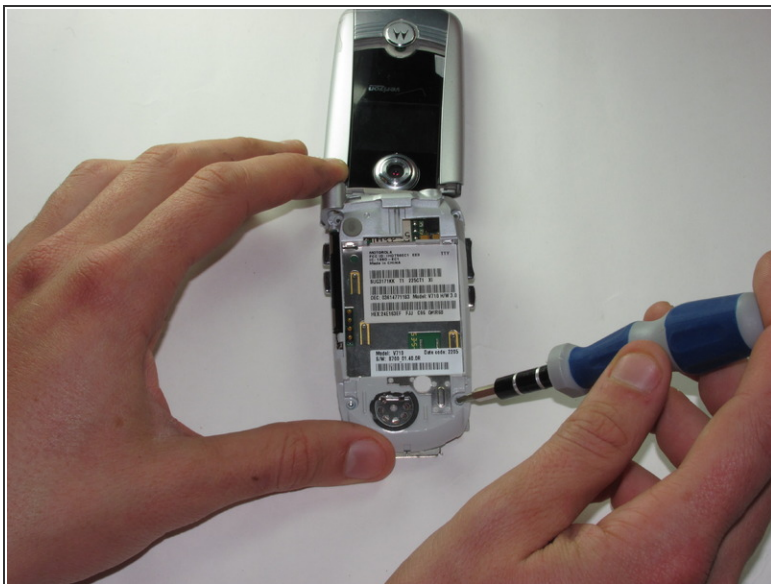

- Use the T6 Torx screwdriver to remove the bottom two screws.






## Step 7




- Insert the spudger between the key plate and the back of the phone and work your way around the edge of the phone to pop keys off.
- There is one clasp on either side that needs to be removed before the keys come off.
- ⓘ This step is extremely hard and may require time, strength, endurance, and multiple spudgers.

## Step 8

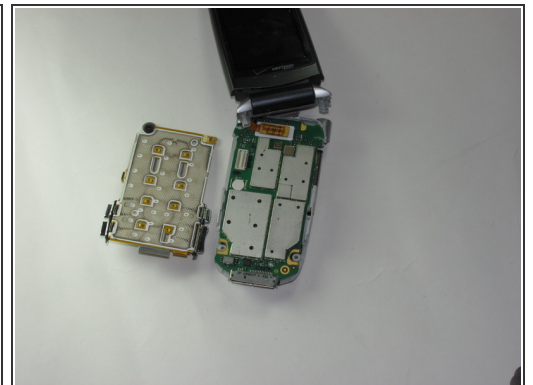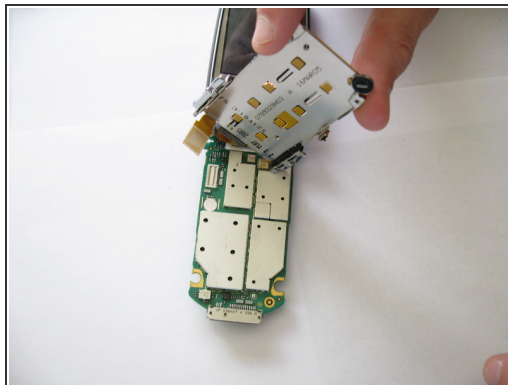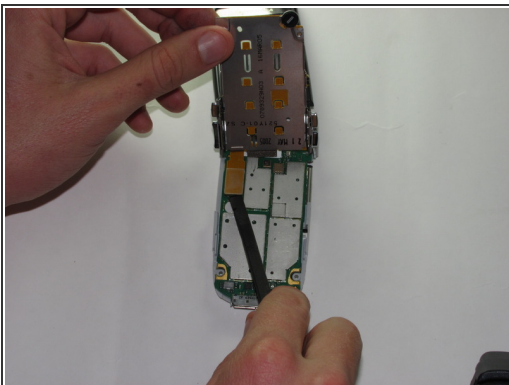



- Pull the pressure plate forward to expose the logic board.
- Use the spludger to pry off the plug that connects pressure pad to the logic board.
- Remove the pressure pad.

## Step 9

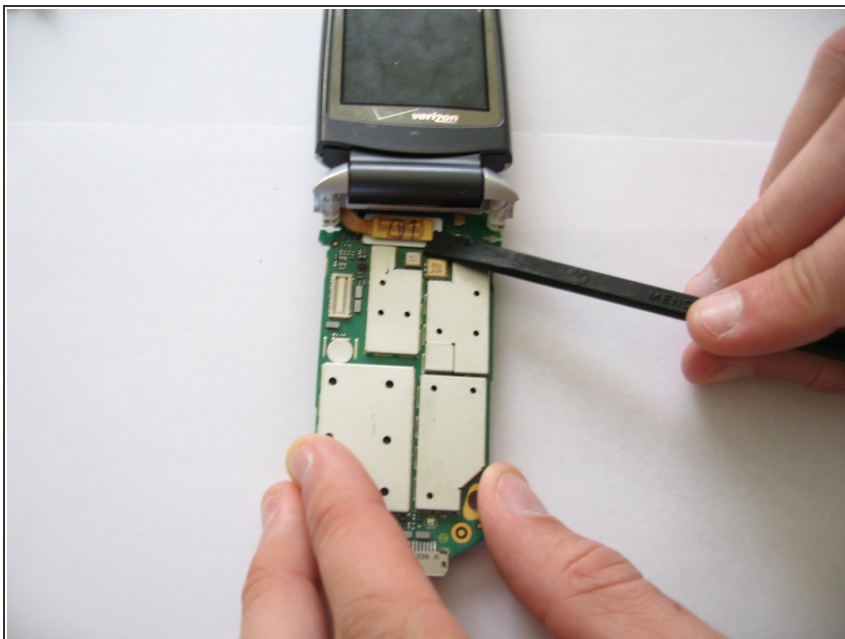

- Use the spudger to pry off the plug that connects logic board to the screen.

## Step 10

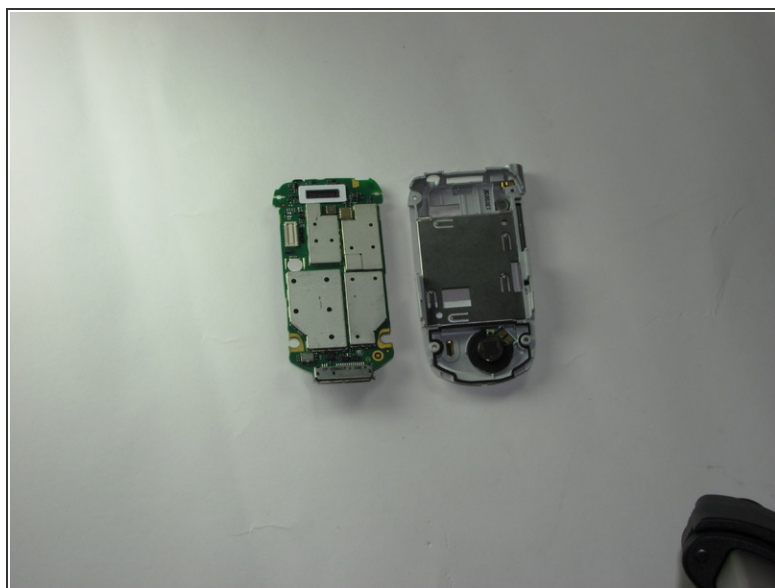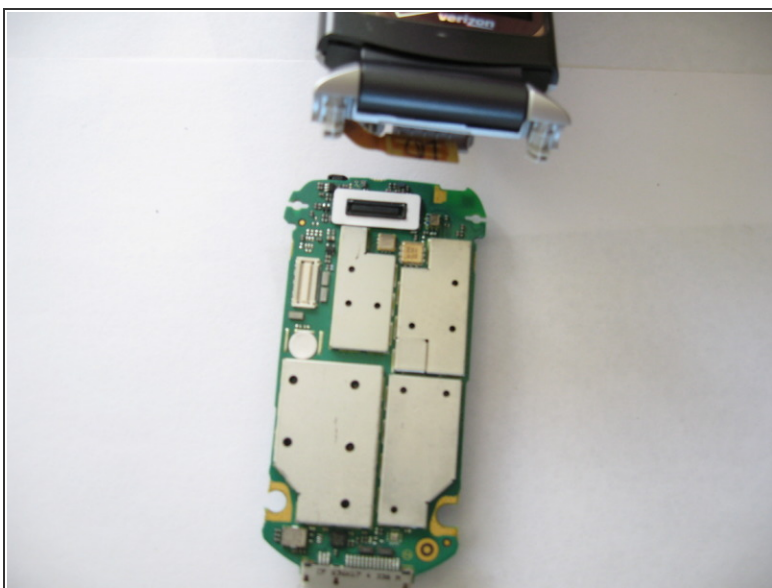

- Remove the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 08:16:06 PM.

